


ASSEMBLY AND INSTALLATION INSTRUCTIONS

OD37276/OD37296/OD14676/OD14696

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

1. Attach the nipple to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the ceiling box by using two mounting screws.
3. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain links. Spread one end of chain link to clamp securely to the loop.
4. Secure the top loop to the nipple.
5. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple and mounting strap.
6. Clamp the other end of chain link to the top loop.
7. Pull out the outlet wires and housing wire from the outlet box. Make wire connections using the wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the cross bar with the green grounding screw. Then connect it to the house grounding wire with a wire nut.Carefully tuck the wires back into the ceiling box.
8. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
9. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
10. Turn on the power at the main fuse or circuit breaker box.

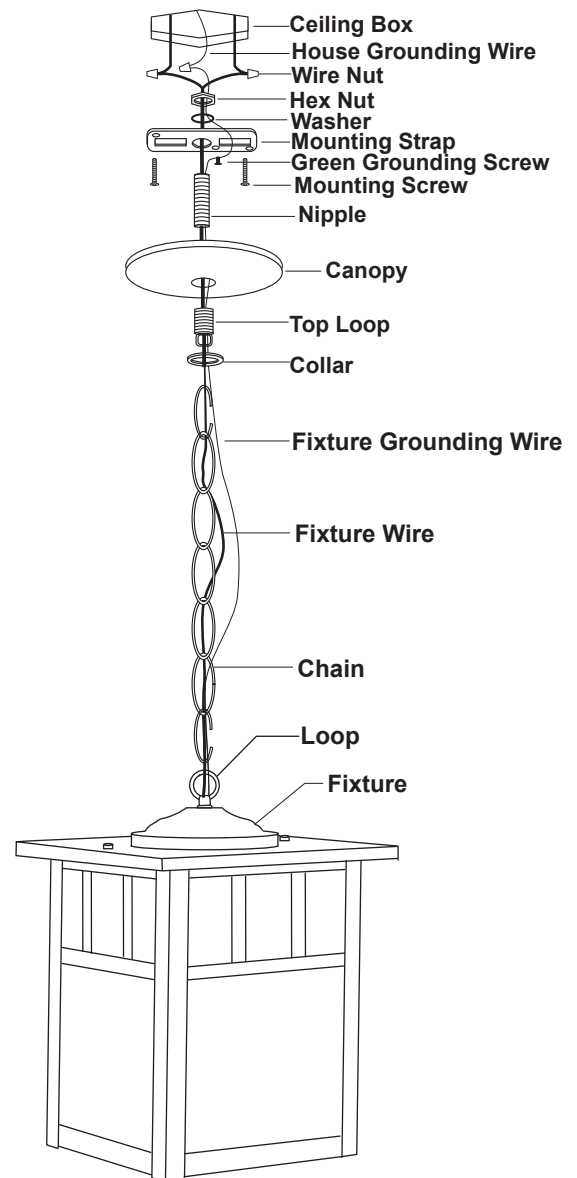

VAXCEL
LIGHTING
060116